



## BTR DIN IP20 APPLICATION SYSTEM\*

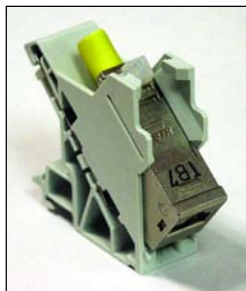
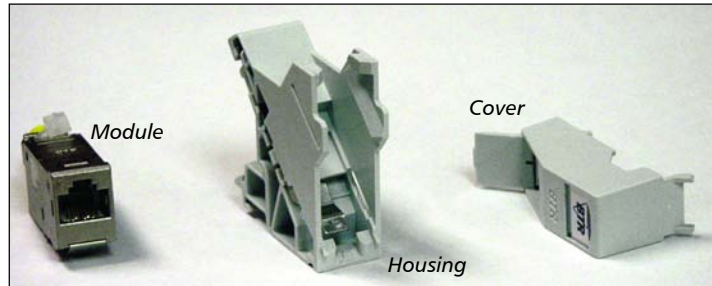


Figure 1

### Step 1

- Terminate module as per instruction booklet.
- Insert module into housing with port facing downward on 45° angle as shown. See Figure 1.
- Be sure module is snapped into housing.

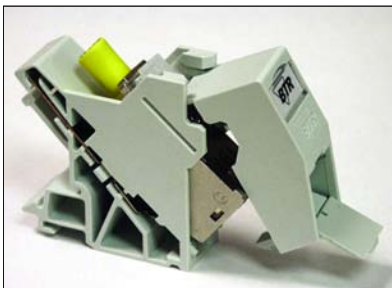


Figure 2

### Step 2

- Insert top portion of cover plate into housing. See Figure 2.



Figure 3

### Step 3

- Rotate cover, snapping bottom tab into housing. See Figure 3.

\*Includes Housing & Cover BTR P/N 1309426103-E and E-DAT Modular Jack BTR P/N 130910-I